


STARTING MOTORS

LISTED BELOW ARE STARTING MOTOR ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts

PRODUCTION NO.	SERVICE NO.	APPLICATION	CHART PAGE NO.
1108365	1108366	1971-74 6 Cyl. Eng.	2-3
1108367	1108366	1971-72 307 Eng.	2-3
1108498	1108498	1972-73 350 Eng.	2-3
1108512	1108366	1973 307 Eng.	2-3
1108224	1108224	1974 350 Eng.	2-3

1971-74 STARTING MOTOR COMPONENT PARTS
(FOR STARTING MOTOR ASSY. APPLICATION REFER TO CHART PAGE 1)

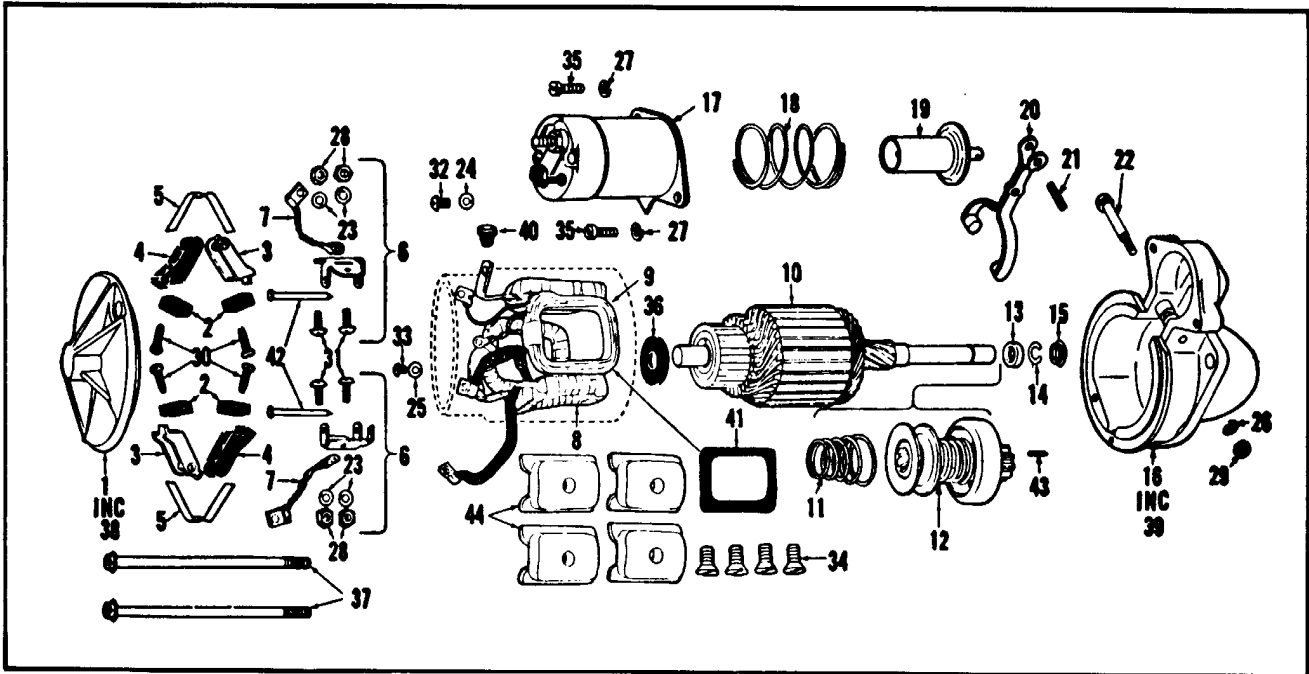

MAJOR PARTS

Starting Motor Assembly Number	Frame C.E.	Brush	Holder Ground	Holder Insul.	Spring Brush	Support Package	Lead Ground	Coil	Coil Shunt	Armature	Spring Assist	Drive Assembly
	1	2	3	4	5	6	7	8	9	10	11	12
1108224	1298966	1906945	1940477	1926618	1926622	1928015	1960864	1877291	1935131	1971568	—	1954842
1108365	"	"	"	"	"	"	"	1967968	—	1966228	—	"
1108366	"	"	"	"	"	"	"	"	—	1971568	—	"
1108367	"	"	"	"	"	"	"	"	—	"	—	"
1108498	"	"	"	"	"	"	"	1935128	1935131	1971568	—	"
1108512	"	"	"	"	"	"	"	1967968	—	"	—	"

Starting Motor Assembly Number	Collar Stop	Ring Retaining	Collar Thrust	Housing Drive	Switch	Spring Plunger	Plunger Shift	Lever Shift	Pin Lever	Stud Lever
	13	14	15	16	17	18	19	20	21	22
1108224	1927849	1927848	1927850	801227	1114379	1958679	1941113	801433	456652	1945804
1108365	"	"	"	1965721	1114356	"	"	1951567	"	"
1108366	"	"	"	1968122	"	"	"	"	"	"
1108367	"	"	"	"	"	"	"	"	"	"
1108498	"	"	"	801227	1114379	"	"	801433	"	"
1108512	"	"	"	1968122	1114356	"	"	1951567	"	"



1971-74 STARTING MOTOR COMPONENT PARTS

MINOR PARTS

KEY	DESCRIPTION	1108224	1108365	1108366	1108367	1108498	1108512
23	LOCKWASHER, Brush Holder Support Screw	—	453435	453435	453435	—	—
24	LOCKWASHER, Field Lead Screw—To Switch	—	—	—	—	—	—
25	LOCKWASHER, Field Lead Screw—To Connector	—	—	—	—	—	—
26	LOCKWASHER, Shift Lever Stud	—	—	—	—	—	—
27	LOCKWASHER, Switch Attach. Screw	—	9421423	9421423	9421423	—	—
28	NUT, Support Screw—Pkg. of 100	5721822	*	*	*	—	—
29	NUT, Shift Lever Stud	—	124824	—	—	—	—
30	SCREW, Brush	448015	*	*	*	*	*
31	SCREW, Support	274738	*	*	*	*	*
32	SCREW, Field Lead	9427815	*	*	*	*	*
33	SCREW	—	—	—	—	—	—
34	SCREW, Pole Shoe	1970469	*	*	*	*	*
35	SCREW, Switch Attach.	—	132255	—	132255	—	—
36	WASHER, Brake—C.E.	818265	*	*	*	*	*
37	BOLT, Thru—With Extension	1941111	—	*	*	*	*
	BOLT, Thru—Less Extension	—	1939970	1939970	1939970	1939970	1939970
39	BUSHING, D.E.	1932190	1923907	—	1923907	*	*
40	GROMMET, (In Field Frame)	1966391	*	*	*	*	*
41	INSULATOR, Field Coil	1927853	*	—	*	*	*
42	PIN, Support	1938058	1966923	—	1966923	*	1966923
43	PIN, Dowel—D.E.	817313	*	809593	*	*	809593
44	SHOE, Pole	1931129	*	—	*	*	*

SOLENOID SWITCH PARTS	1114356	1114367	1114379
STUD, Term (3/8-16)—Motor	1950120	1949890	1955499
STUD, Term (8-32)—Switch	822205	1950069	1950069
CLIP, Term	1937381	—	—
COVER	1963525	6258043	6258043
GASKET, Cover	1966034	—	—
WASHER, Cover Screw	1923935	1956015	—
SCREW, Cover	453468	*	*
STUD, Term (8-32)—Resistor	822205	1935644	1935644
CONTACT, Term (8-32)	1935645	*	*
CONTACT & PUSH ROD	1956226	*	*
WASHER, Term Stud (3/8-16)—Rubber	1950064	—	—
WASHER, Term Stud (3/8-16)—Plain	3765135	—	—
WASHER, Term Stud (8-32)—Rubber	1950071	—	—
WASHER, Term Stud (8-32)—Plain	1914476	—	—
NUT, Term Stud (3/8-16)	1904419	—	—
SPRING, Contact Return	1853342	*	*
SCREW, Field Lead To Term (10-32)	9427815	—	—
SPRING, Plunger Return	1958679	*	*




DELCOTRONS

LISTED BELOW ARE GENERATOR AND DELCOTRON ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts

PRODUCTION NO.	SERVICE NO.	APPLICATION	CHART PAGE NO.
1100566 (37 Amp)	1100842 (42 Amp)	1971 6 Cyl. Eng. Exc. P.S.	2
1100836 (37 Amp)	"	1971 6 Cyl. Eng. w/P.S.	2
1100566 (37 Amp)	"	1971 307 Eng.	2
1100843 (61 Amp)	1100849 (61 Amp)	1971 307 Eng.	2
1102440 (37 Amp)	1102459 (42 Amp)	1972 6 Cyl. or 307 Eng.	3
1100927 (37 Amp)	1100543 (42 Amp)	1972 350 Eng.	3
1102463 (61 Amp)	1102455 (61 Amp)	1972 307 Eng.	3
1100928 (55 Amp)	1100554 (63 Amp)	1972 350 Eng.	3
1100497 (37 Amp)	1100543 (42 Amp)	1973-74 6 Cyl. Eng.	3
1100934 (37 Amp)	"	1973 307 Eng.	3
1100927 (37 Amp)	"	1973-74 350 Eng.	3
1100597 (61 Amp)	1100554 (63 Amp)	1973 307 Eng.	3
1100928 (55 Amp)	"	1973-74 350 Eng.	3

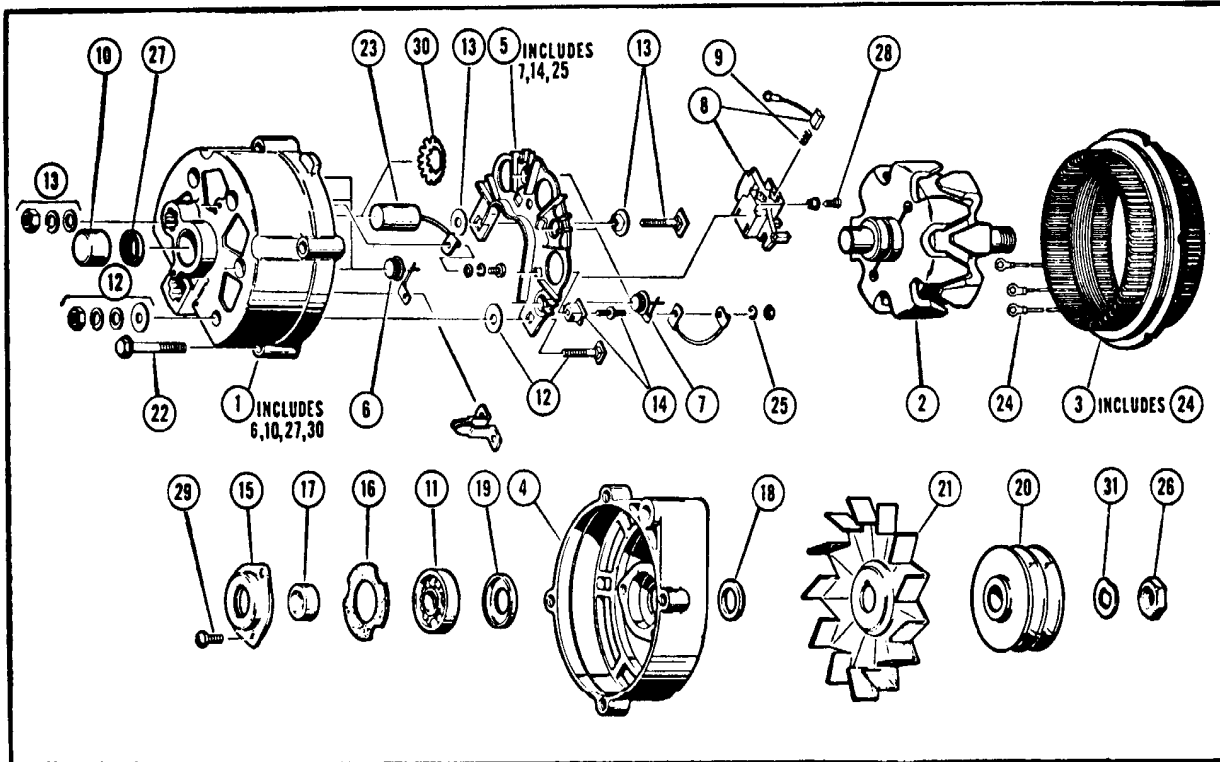

1971 DELCOTRON COMPONENT PARTS

For the following Delcotrons: 1100566, 1100836, 1100842, 1100843, 1100849

For Delcotron Usage Refer To Delcotron Chart Page 1

Key	Description	Part No.
1	Frame, S.R.E.	800396
2	Rotor	1958565
3	Stator—For 1100849	1962025
	—For 1100566—836—842—849	1959381
4	Frame, D.E.	1959917
5	Heat, Sink	1959828
6	Diode, Neg.	1959830
7	Diode, Pos.	1959829
8	Brush Holder	1964682
9	Spring, Brush	1964117
10	Bearing, S.R.E.—For 1100566	1961323
	—For 1100843	9427225
	—For 1100836—842—849	9418076
11	Bearing, D.E.	5728798
12	Terminal, Bat.	1959832
13	Terminal, Ground	1959833
14	Terminal, Diode	1959834
15	Plate, Bearing Retainer	1971993
16	Gasket	1912008
17	Collar—Inside	1963139
18	Collar—Outside	1959991


Key	Description	Part No.
19	Slinger—For 1100566	800832
	—All Exc. 1100566	1947344
20	Pulley—See Data Section/Group 2.274/	—
21	Fan—See Data Section/Group 2.274/	—
22	Bolt, Thru	1956975
23	Capacitator	1959455
24	Clip, Stator	1959532
25	L/Washer, Holder	1847933
	L/Washer, Term.	1847933
	L/Washer, Diode	1847933
26	Nut, Shaft D.E.	1915172
27	Retainer, S.R.E.	1959790
28	Screw, Holder	9420489
29	Screw, Brg.	1965104
30	Spring, Capacitator	1960750
31	L/Washer, Shaft	1941978
	Non-Illustrated Parts	
	Insulator, Term.	1959389
	Washer, Term. (Insul.)	1959523
	Washer, Term. (Plain)	1914476



1972-74 DELCOTRON COMPONENT PARTS

FOR THE FOLLOWING DELCOTRONS: 1100497, 1100543, 1100554, 1100927, 1100928,
1100934, 1102440, 1102455, 1102459, 1102463

For Delcotron Usage Refer To Delcotron Chart Page 1

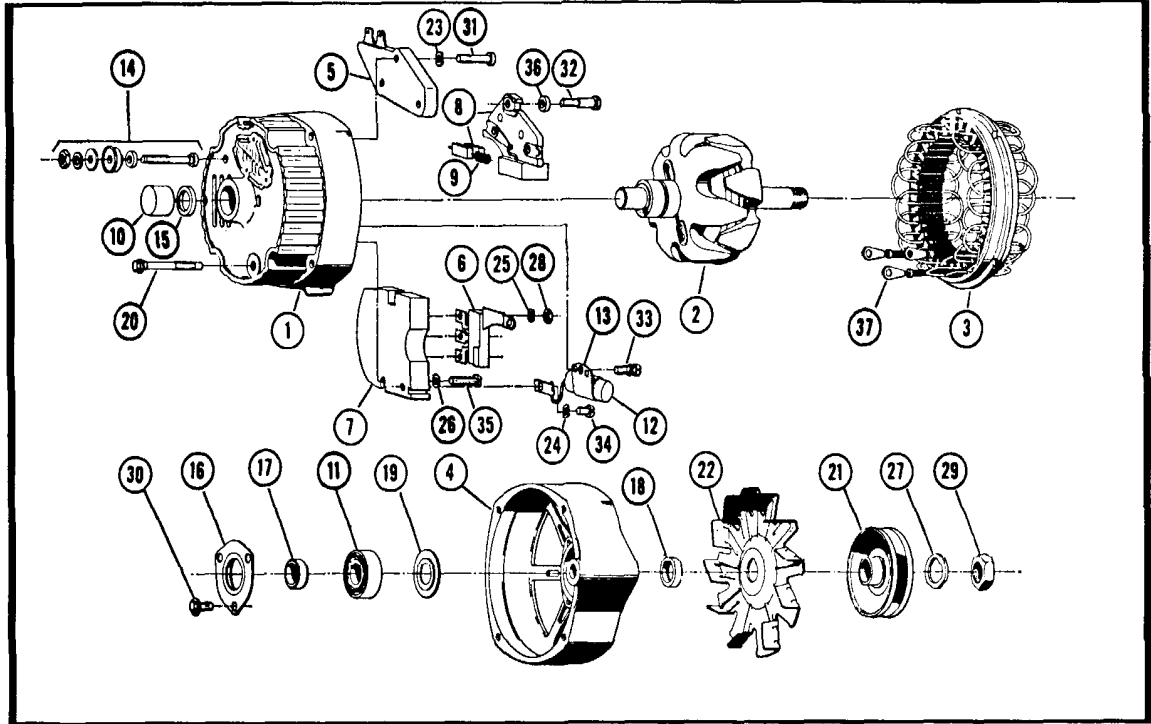

Key	Description	Part No.
1.	Frame SRE—Includes Key 10 & 15 —For 1100497-597-927-928-934, 1102445-459	1852101 1846523
2.	Rotor—For 1100497-554-597-927-928-934 —For 1100543 —For 1102445-459	1846657 1971990 1958565
3.	Stator—Includes Key 37 —For 1100543-554-597-928, 1102455 —For 1102459 —For 1100497-927-934	1971639 1971686 1971986
4.	Frame D.E.	800135
5.	Regulator	1116387
6.	Diode Trio	1971528
7.	Bridge Rectifier	1852209
8.	Brush and Holder—Includes Key 9	801466
9.	Spring, Brush	1964117
10.	Bearing, SRE—For 1100497-597, 1102455-459 —For 1100543-554 —For 1100927-928-934	7451931 7451763 9432068
11.	Bearing, D.E.	907998
12.	Capacitor	801824
13.	Bracket, Capacitor	1869573
14.	Terminal, Battery	1846900
15.	Seal, Bearing—For 1100543-554-927-928-934	1961323
16.	Plate, Bearing Retainer	1971993
17.	Collar, Inside	1963139
18.	Collar, Outside—For 1100497-543-554-597-927-928-934, 1102455 —For 1102459	1959991 1970474

Key	Description	Part No.
19.	Slinger, Grease	800832
20.	Bolt, Thru	1956975
21.	Pulley—See Data Section—Group 2.274	—
22.	Fan, See Data Section	—
23.	Lockwasher, Brush Holder Attaching Screw	1847933
24.	Lockwasher, Capacitor Lead Attaching Screw	—
25.	Lockwasher, Rectifier Bridge Nut	1847933
26.	Lockwasher, Rectifier Bridge Screw	1847933
27.	Lockwasher, Shaft Nut D.E.	1941978
28.	Nut, Rectifier Bridge—For 1102455-459 —For 1100543-554	1847933 453434
29.	Nut, Shaft—D.E.	1915172
30.	Screw, Bearing Retainer	1965104
31.	Screw, Brush Holder—Ground	1971519
32.	Screw, Brush Holder—Insulator	1846864
33.	Screw & Lockwasher, Capacitor	9422873
34.	Screw, Capacitor Lead	9422873
35.	Screw, Rectifier Bridge	1970145
36.	Washer, Brush Holder Insulator Screw —For 1100497-597-934	9419392
37.	Clip, Stator Lead Terminal & Spacer—Field & Indicator Light —For 1102455-459	1846548 1852097



DISTRIBUTORS


LISTED BELOW ARE DISTRIBUTOR ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts

PRODUCTION NO.	SERVICE NO.	APPLICATION	CHART PAGE NO.
1110489	1110489	1971-72 250 Eng.	2
1112005	1112005	1971 307 Eng. St.	3
1112039	1112039	1971 307 Eng. At	3
1112005	1112005	1972 307 Eng. St. (1st Type)	3
1112134	1112005	1972 307 Eng. St. (2nd Type)	4
1112039	1112147	1972 307 Eng. At (1st Type)	4
1112147	1112147	1972 307 Eng. At (2nd Type)	4
1112140	1112140	1972 350 Eng. St.	4
1112118	1112118	1972 350 Eng. At (1st Type)	4
1112138	1112138	1972 350 Eng. At (2nd Type)	4
1110499	1110499	1973-74 250 Eng.	2
1112227	1112227	1973 307 Eng. St.	4
1112102	1112102	1973 307 Eng. At	4
1112234	1112234	1973-74 350 2BC) Eng. AT	5
1112236	1112236	1973-74 350 (2BC) Eng. ST	5
1112822	1112822	1973-74 350 (4BC) Eng. AT	5
1112856	1112856	1973-74 350 (4BC) Eng. ST	5



1971-73 6 CYL. DISTRIBUTOR COMPONENT PARTS
(FOR DISTRIBUTOR APPLICATION SEE GROUP 2.361)

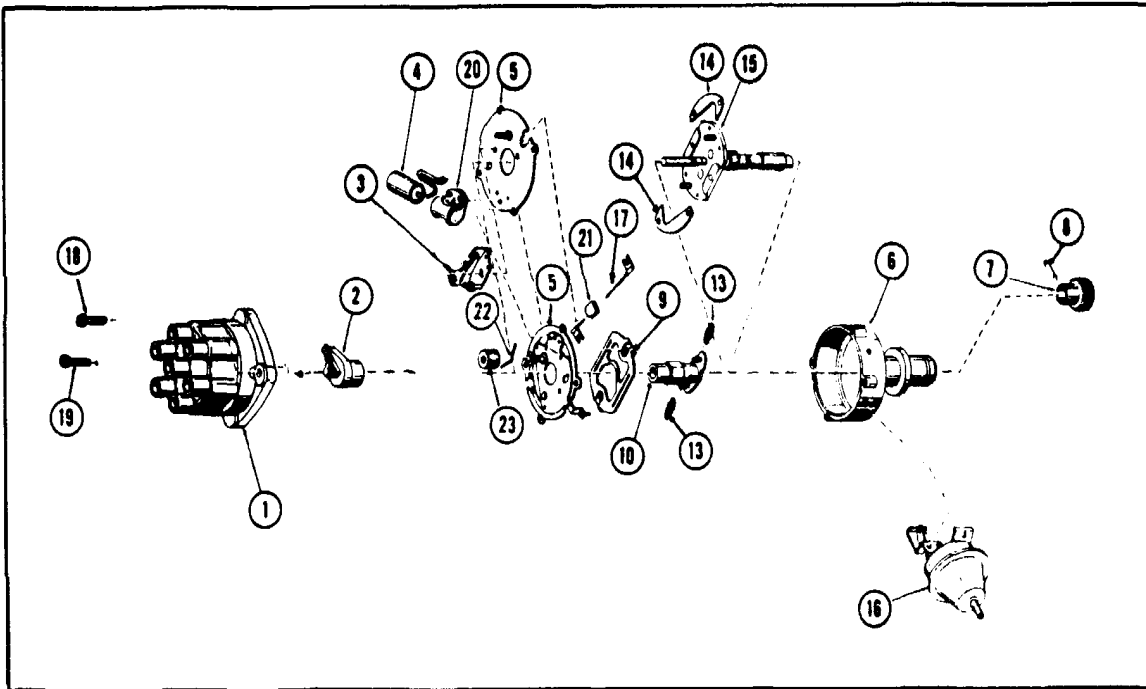

MAJOR PARTS

Distributor Stamping	Cap	Rotor	Contact Assy.	Condenser	Plate, Breaker	Housing	Collar Coupling or Gear	Pin	Plate, Hold Down
ASSEMBLY	1	2	3	4	5	6	7	8	9
1110489	1971324	800056	1954557	1928111	1961428	1846069	1962052	456652	1954548
1110499	1971324	800056	1954557	1928111	1961428	1846069	1962052	454512	1954548

Distributor Stamping	Cam	Spring, Weight	Weight	Shaft	Vacuum Control	Lead Primary
ASSEMBLY	10	13	14	15	16	17
1110489	1966901	1912886	1881371	1876248	1973434	1954563
1110499	1966901	1912886	1881371	1876248	1973428	1954563


MINOR PARTS

KEY	DESCRIPTION	1110489	1110499
18	SCREW (#8-32) Cap Attach.....	1954571	*
19	SCREW (#10-32) Cap Attach.....	1957573	*
20	BRACKET, Condenser.....	1944118	*
21	GROMMET.....	1954564	*
22	SPRING, Breaker Plate.....	1956213	*
23	WICK, Cam Lub.....	1852935	*



**VENTURA II
PARTS CATALOGUE**

1971-72 8 CYL. DISTRIBUTOR COMPONENT PARTS
(FOR DISTRIBUTOR APPLICATION SEE GROUP 2.361)

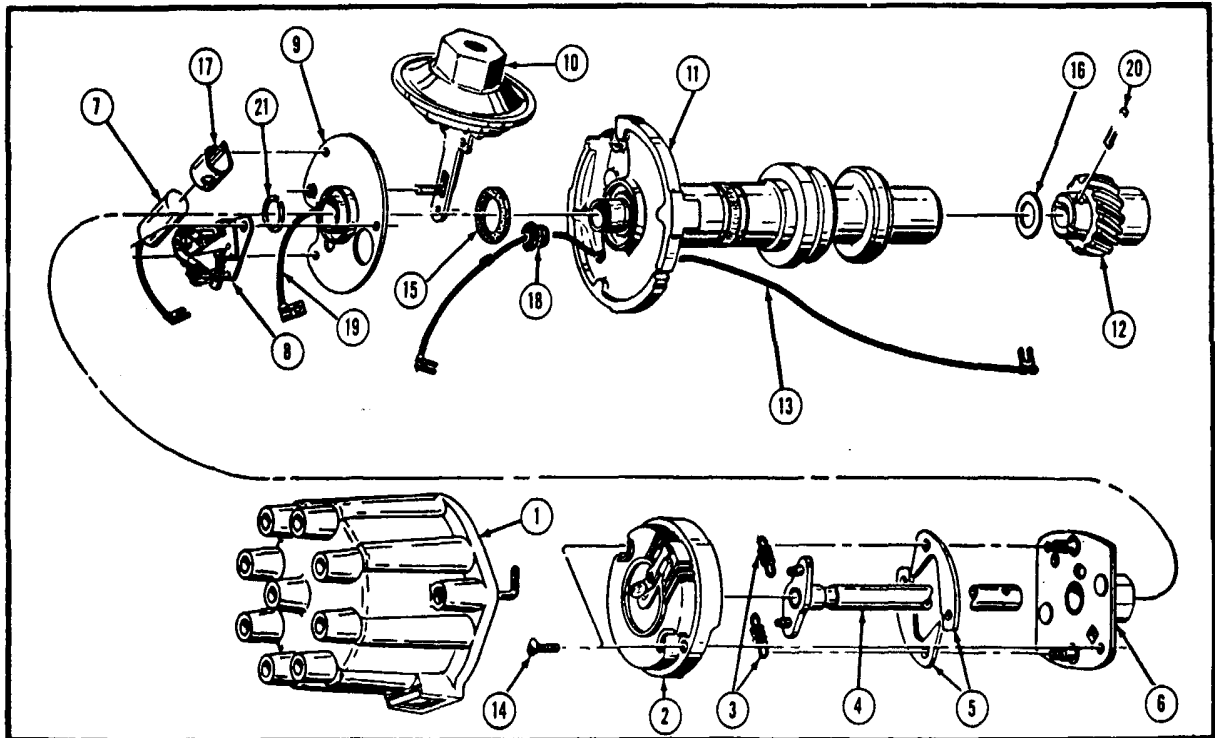

MAJOR PARTS

Distributor Stamping	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assy.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
ASSEMBLY	1	2	3	4	5	6	7	8	9	10	11	12	13
1112005	800061	1971247	1963965	1941361	1881371	1942360	1932004	1931988	1846122		1966407	1958599	1846199
1112039	"	"	1946990	1851705	"	1851057	"	"	"	1973436	"	"	"
1110912	1971244	"	1963965	1941361	1924737	1947360	"	"	1962141	1115537	"	"	1942518


MINOR PARTS

KEY	DESCRIPTION	1112039	1110912	1112005
14	SCREW & LOCKWASHER, Rotor Attach	274453	*	*
15	WASHER, /Felt/ Under Plate	1951099	*	*
16	WASHER, /Tang/ Under Gear	1837617	*	*
17	BRACKET, Condenser	1869573	*	*
18	GROMMET, For Primary Lead	1932023	*	*
19	LEAD, Breaker Plate Ground	1932002	*	*
20	PIN, Gear Attach	456652	*	*
21	SPRING, Breaker Plate Retainer	1932024	*	*
	SEAL, Housing	1950569	*	*
	SCREW, Shield Attach	1846215	—	*
	SHIELD PKG., Radio Frequency Interference	1846216	—	*
	SLEEVE, Spring Post	1945548	1945548	*
	WASHER, /Tang/ Between Gear & Base	1965864	*	*
	WICK, Cam Lub	1961088	*	1949084
	RETAINER, Wick	1963858	*	

* Part Number Same As Number In First Column.

1972-73 8 CYL. DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR APPLICATION SEE GROUP 2.361)

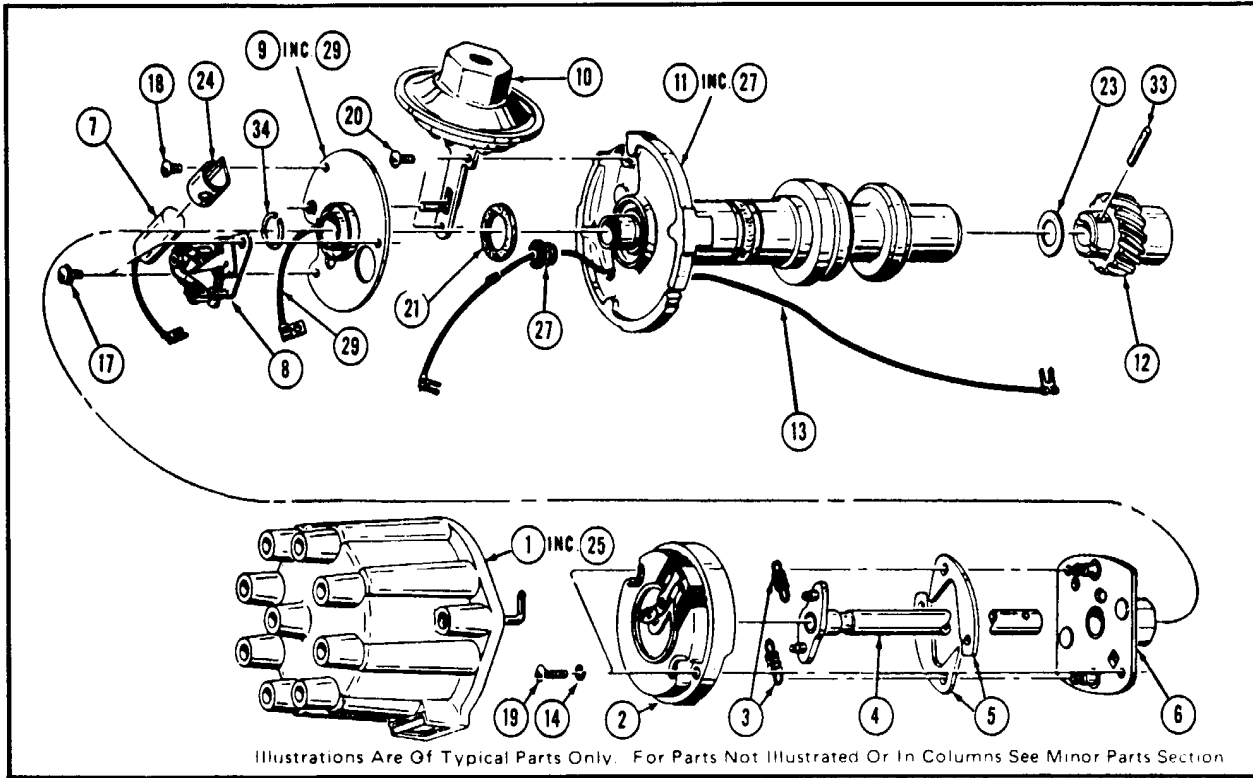
MAJOR PARTS

Distributor Assembly	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con-denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112118	800061	1971247	1851772	1851810	1881371	801314	1932004	1931988*	1846122	1115364	1967562	801200	1852969
1112134	1971244	"	1851343	1851341	"	1941849	—	1975000	1875798	"	"	"	1942518
1112138	800061	1971247	1851823	1941361	"	1940558	—	"	"	1973436	1966407	1958599	1846199
1112140	"	"	1851341	1851341	"	1941849	"	1931988*	1846122	1115364	1967562	801200	1852969
1112147	"	"	1852917	1851705	"	1851057	—	1975000	1875798	1973436	1966407	1958599	1846199
1112102	"	1852722	1912886	1851705	"	1851057	"	1931988*	1846122	1973448	1967025	1958599	1875613
1112227	"	"	1851823	1941361	"	1966686	"	"	"	1973448	1966407	1958599	1875613

*1ST TYPE.

2ND TYPE—1876600 INCLS. POINTS AND CONDENSER.


MINOR PARTS

KEY	DESCRIPTION	1112118	1112134	1112138	1112140	1112147	1112102	1112227
—	SCREW & LOCKWASHER, R.F.I. Shield	1846215	*	—	*	—	*	*
19	SCREW & LOCKWASHER, Rotor Attaching	274453	*	*	*	*	—	*
21	WASHER — Under Plate — Felt	1951099	*	*	*	*	*	*
23	WASHER — Under Gear — Tang	1837617	*	*	—	—	1965864	1965864
24	BRACKET, Condenser	1869573	*	—	*	—	*	*
27	GROMMET — For Primary Lead	1932023	*	*	*	*	—	*
29	LEAD, Breaker Plate Ground	1932002	*	*	*	*	*	*
33	PIN, Gear Attaching	456652	*	*	*	*	*	*
	RETAINER, Felt Wick	1963858	*	1946818	*	*	*	*
	SHIELD PKG., Radio Frequency Interference	1846216	*	—	*	—	*	*
	SEAL, Lubrication	1950569	*	*	*	*	*	*
	SLEEVE, Spring Post	1945548	1961234	—	*	1961234	1961234	1961234
34	SPRING, Breaker Plate Retainer	1932024	*	*	*	*	*	*

*PART NUMBER IS SAME AS NUMBER IN FIRST COLUMN

1974 8 CYL. DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR APPLICATION SEE GROUP 2.361)

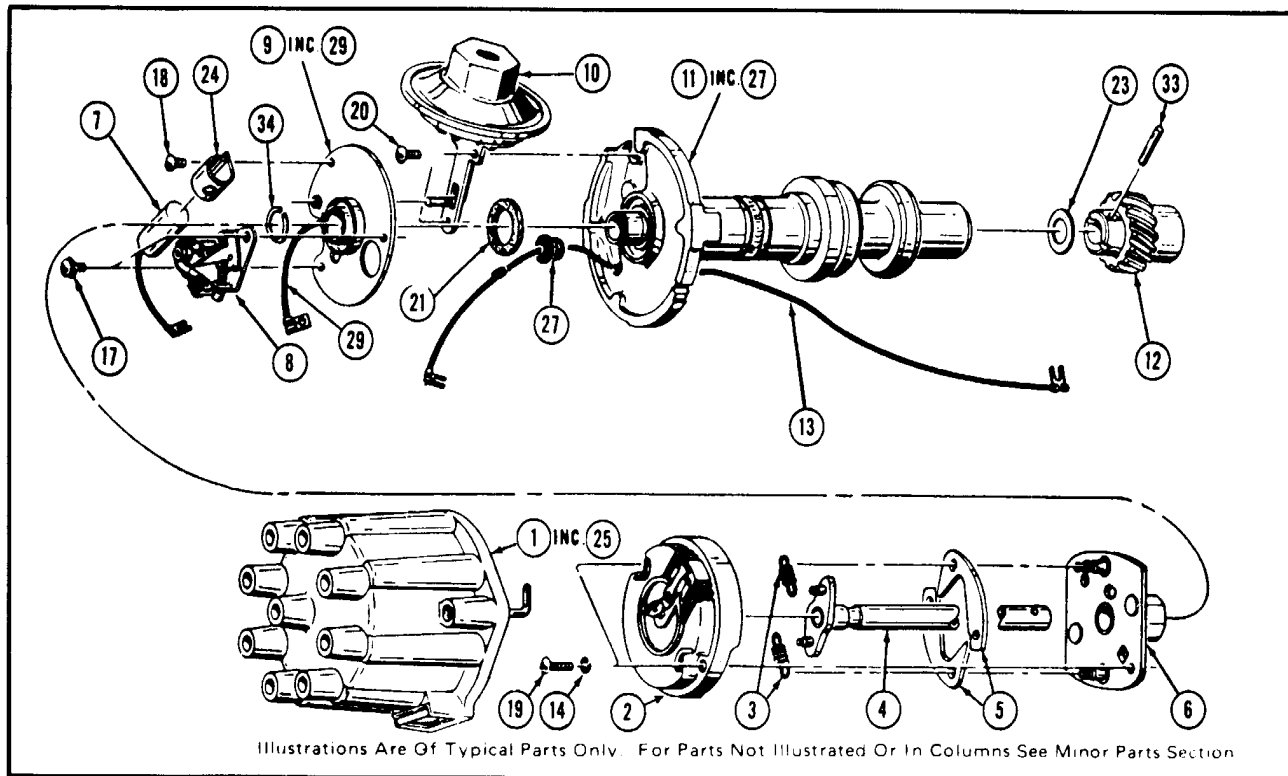
MAJOR PARTS

Distributor Assembly	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112234	800061	1852722	—	1875838	—	—	—	1876600	1876641	1115364	1967562	801200	1875613
1112236	"	"	—	1870858	—	—	—	"	"	"	"	"	"
1112822	"	"	—	1875914	—	—	—	"	"	"	"	"	"
1112856	1971244	"	—	1877363	—	—	—	"	"	"	"	1958599	"

MINOR PARTS

KEY	DESCRIPTION	1112234	1112236	1112822	1112856
—	SCREW & LOCKWASHER, R.F.I. Shield	—	—	—	—
19	SCREW & LOCKWASHER, Rotor Attaching	274453	*	*	1852783
21	WASHER — Under Plate — Felt	1951099	*	*	*
23	WASHER — Under Gear — Tang	1837617	*	*	*
24	BRACKET, Condenser	—	—	—	1869573
27	GROMMET — For Primary Lead	1932023	*	*	*
29	LEAD, Breaker Plate Ground	1932002	*	*	*
33	PIN, Gear Attaching	455862	*	456652	456652
	RETAINER, Felt Wick	1963858	*	*	*
	SHIELD PKG., Radio Frequency Interference	—	—	—	—
	SEAL, Lubrication	1950569	*	*	*
	SLEEVE, Spring Post	—	—	—	—
34	SPRING, Breaker Plate Retainer	1932024	*	*	*

*PART NUMBER IS SAME AS NUMBER IN FIRST COLUMN



KEY USAGE CHART

Year	Part Number	Coded Uncoded	Oval Head Square Head	Stamped					
					Ignition	Front Doors	Glove Box	Console Door	Trunk Lid
1971	726325	Coded	Square	A	x	x			
1971	7027275	Uncoded	Square	A	x	x			
1971	726326	Coded	Oval	B			x	x	x
1971	7027281	Uncoded	Oval	B			x	x	x
1972	726681	Coded	Square	C	x	x			
1972	7024229	Uncoded	Square	C	x	x			
1972	726680	Coded	Oval	D			x	x	x
1972	7024235	Uncoded	Oval	D			x	x	x
1973	725785	Coded	Square	E	x	x			
1973	7025014	Uncoded	Square	E	x	x			
1973	725777	Coded	Oval	H			x	x	x
1973	7025019	Uncoded	Oval	H			x	x	x
1974	726057	Coded	Square	J	x				
1974	7025282	Uncoded	Square	J	x				
1974	726058	Coded	Oval	K		x	x	x	x
1974	7025288	Uncoded	Oval	K		x	x	x	x